


SQUEEZY

installation note

1. Make sure your seat tube has the correct diameter

- 34.9mm ~ 35.0mm for Squeezy 35
- 38.0mm ~ 38.5mm for Squeezy 38

2. Make sure that Squeezy can fully slide onto the seat tube. The Squeezy must slide the full 12mm height onto the seat tube.

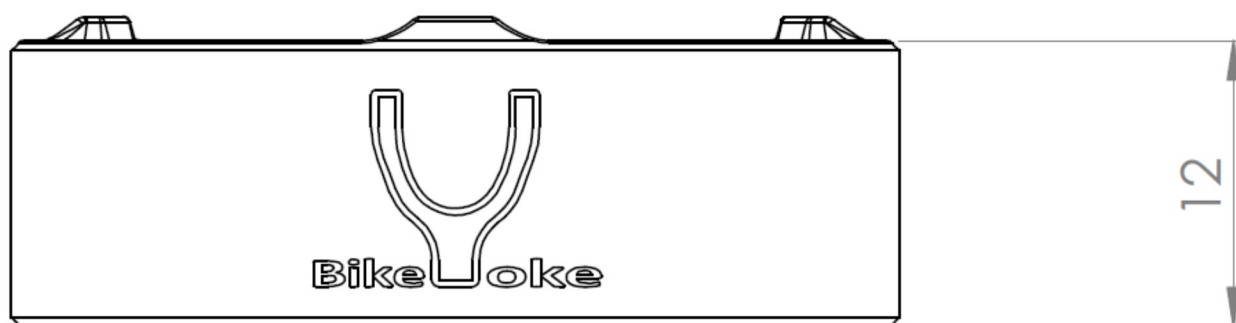

3. Maximum torque is 4.5Nm (not greased)

It is recommended to keep the torque just as high as required, yet as low as possible. The post should not slowly creep into the seat tube during riding, but at the same time the post should be able to rotate during a crash or side impacts to avoid overload. If you torque too high, you may affect the function of your dropper post.

4. Check the seat clamp for proper installation before every ride.

